Mmicrosonic



Instruction manual hps- Ultrasonic Sensors for application in overpressure with two switched outputs

hps-25/TF/DD/TC/E/G1_2 hps-25/TF/EE/TC/E/G1_2 hps-25/TF/DD/TC/E/NPT hps-25/TF/EE/TC/E/NPT

Product description

- The hps sensor measures the level in a pressurized vessel in up to 6 bar overpressure contactless. The G1/2 or NPT threaded pipe end permits the mounting and sealing of the sensor in a flange of the vessel. The hps sensor is designed for applications in 1 bar up to 6 bar overpressure. The switched outputs are set according to the adjusted detect distances.
- The surfaces of the ultrasonic tranducers of the hps-sensor is protected by a PTFE film (Teflon film). Therefore the surface of the ultrasonic transducer can be cleaned from cakings or spots.
- All settings are done with two push-buttons and a three-digit LED-display (TouchControl).
- Light emitting diodes (three-colour LEDs) indicate all operation conditions.
- The sensors are adjustable manually using the numerical LED-display or may be trained using Teach-in processes.
- Useful additional functions are set in the Add-on-menu.
- With the LinkControl Adapter LCA-2, available as accessory, all sensor settings can be made optionally with a PC using the LinkControl software.

Important instructions for assembly and application

All employee and plant safety-relevant measures must be taken prior to assembly, start-up, or maintenance work (see operation manual for the entire plant and the operator instruction of the plant).

The sensors are not considered as safety equipment and may not be used to ensure human or machine safety!

The hps sensors indicate a **blind zone**, in which the distance cannot be measured. The **operating range** indicates the distance of the sensor that can be applied from 1 bar overpressure on with sufficient function reserve.

Assembly instructions

- Assemble the sensor at the installation location.
- ► If necessary seal the sensor with the enclosed Viton O-ring (26,7 x 1,78 mm) against the flange.
- ▶ Plug in the connector cable to the M 12 connector.

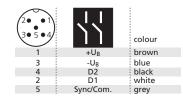


Fig. 1: Pin assignment with view onto sensor plug and colour coding of the microsonic connection cable

t-up

hps-sensors are delivered factory made with the following settings:

- Switched outputs on NOC
- Detecting distances at 125 mm and 250 mm
- Measurement range set to maximum

Set the parameters of the sensor manually or use the Teach-in procedure to adjust the detect points.

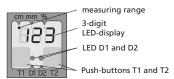


Fig. 2: TouchControl

Operation

hps-sensors work maintenance free. Small amounts of dirt on the surface do not influence function. Thick layers of dirt and cakedon dirt affect the sensor function and therefore must be removed.

pensation reaches its optimum working point after approx. 30 minutes of operation. suring range During normal mode operation, a yellow LED D2 signals that the switched output

has connected.

During normal mode operation, the mea-

■ The hps-sensors work best from 1 bar

overpressure on. In applications under 1

bar the maximum operating range may

be limited. In this case the maximum ope-

rating range has to be determined in a

compensation. Because the sensors heat

up on their own, the temperature com-

■ hps-sensors have internal temperature

- sured distance value is displayed on the LED-indicator in mm.

 During Teach-in mode, the hysteresis
- loops are set back to factory settings.

 If no objects are placed within the detec-
- tion zone the LED-indicator shows »- -«.
- If no push-buttons are pressed for 20 seconds during parameter setting mode the made changes are stored and the sensor returns to normal mode operation.

Show parameters

Tapping push-button T1 shortly during normal mode operation shows »PAr« on the LED-display. Each time you tap push-button T1 the actual settings of the analogue output and the switched output are shown.

